

Read head for incident light positioning system



# Dimensions







# **Technical Data**

General specifications		
Passage speed	v	≤ 8 m/s
Measuring range		max. 10000 m
Light type		Integrated LED lightning (white/blue)
Scan rate		25 s <sup>-1</sup>
Latency		60 ms
Read distance		100 mm
Depth of focus		± 20 mm
Reading field		120 mm x 80 mm
Ambient light limit		100000 Lux

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com



Technical Data		
Accuracy		+ 0.2 mm
Nominal ratings		
Camera		
Туре		CMOS. Global shutter
Processor		
Clock pulse frequency		600 MHz
Speed of computation		4800 MIPS
Functional safety related parameters		
MTTF <sub>d</sub>		100 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
LED indication		7 LEDs (communication, alignment aid, status information)
Electrical specifications		
Operating voltage	UB	15 30 V DC , PELV
No-load supply current	I <sub>0</sub>	max. 400 mA
Power consumption	Po	6 W
Interface		
Interface type		PROFIBUS DP V0
Protocol		PROFIBUS DP acc. to EN 50170
Transfer rate		9.6; 19.2; 93.75; 187.5; 500; 1500 kBit/s
		3; 6; 12 Mbit/s self-synchronizing
Interface 2		
Interface type		USB Service
Input		
Input type		1 funtion input 0-level: -U <sub>B</sub> or unwired 1-level: +8 V +U <sub>B</sub> , programmable
Input impedance		≥ 27 kΩ
Output		
Output type		1 to 3 switch outputs , PNP , programmable , short-circuit protected
Switching voltage		Operating voltage
Switching current		150 mA each output
Standard conformity		
Emitted interference		EN 61000-6-4:2007+A1:2011
Noise immunity		EN 61000-6-2:2005
Shock resistance		EN 60068-2-27:2009
Vibration resistance		EN 60068-2-6:2008
Approvals and certificates		
UL approval		cULus Listed, General Purpose, Class 2 Power Source, Type 1 enclosure
CCC approval		CCC approval / marking not required for products rated ≤36 V
Ambient conditions		
Operating temperature		0 60 °C (32 140 °F), -20 60 °C (-4 140 °F) (noncondensing; prevent icing on the lens!)
Relative humidity		90 %, noncondensing
Mechanical specifications		
Connection type		8-pin, M12x1 connector, standard (supply+IO) 5-pin, M12x1 socket, B-coded (Bus Out) 5-pin, M12x1 connector, B-coded (Bus In)
Housing width		70 mm
Housing height		70 mm
Housing depth		50 mm
Degree of protection		IP67
Material		
Housing		PC/ABS

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

# Optical reading head

# PGV100-F200A-B6-V15B

### **Technical Data**

Mass	approx. 200 g
Factory settings	
X resolution (protocol)	0.1 mm
Y resolution (protocol)	0.1 mm
Speed resolution (protocol)	0.1 m/s
Angle resolution	0.1 °

# Connection



# **Connection Assignment**



## **Function Principle**



Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

## Optical reading head

# **Function Principle**





# Matching System Components

	PGV*-CA25-*	Data Matrix code tape
General Contraction of the second sec	PGV*-CC25-*	Control code tape für PGV System
0	PGV25M-CD100-CLEAR	Protective laminate for PGV code tape
0	PGV25M-CD160-CLEAR	Protective laminate for PGV code tape
6	PGV33M-CB19-BU	PGV color-tape blue
6	PGV33M-CB19-GN	PGV color-tape green
6	PGV33M-CB19-RD	PGV color-tape red
	PGV33M-CB19-YE	PGV color-tape yellow

## Accessories

	ICZ-TR-V15B	Terminal resistor for PROFIBUS
>	V15B-G-2M-PUR-ABG- V15B-G	PROFIBUS bus cable M12 socket straight to M12 plug straight B-coded, 5-pin, PUR cable 2-core violet, shielded

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com



# Optical reading head

Acces	sories	
$\sim$	V15B-G-5M-PUR-ABG- V15B-G	PROFIBUS bus cable M12 socket straight to M12 plug straight B-coded, 5-pin, PUR cable 2-core violet, shielded
and a	PCV-SC12	Grounding clip for PCV system
A	PCV-AG100	Alignment guide for PCV100-* read head
.,*	PCV-LM25	Marker head for 25 mm code tape
	PCV-MB1	Mounting bracket for PCV* read head
<u>O</u> r	Vision Configurator	Operating software for camera-based sensors
ę?9)	PCV-KBL-V19-STR-USB	USB cable unit with power supply
	PGV25M-CD120-CLEAR	Protective laminate for PGV code tape
-	VAZ-V1S-B	Blind plug for M12 sockets

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Gr

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

## **Additional Information**

### General

The PGV... reader forms part of the positioning system in the Pepperl+Fuchs incident light process. The reader's features include a camera module and an integrated illumination unit. The reader uses these features to detect a colored strip stuck to the floor to track the lane. The reader also detects control codes and position markers in the form of Data Matrix codes attached to a self-adhesive code tape. The code tape is usually mounted in a fixed position instead of the colored strip or parallel to the colored strip. The reader is located on the front of an automated guided vehicle and guides this vehicle along the colored strip.

### Mounting and Commissioning

Mount the reader such that the optical surface of the device captures the optimum reading distance to the colored strip (see "Technical Data"). The stability of the mounting and the manner in which the vehicle is guided ensure that the reader is not operated outside of its depth of focus range. The colored strip must not leave the maximum reading window for the reader during this process. All readers can be adapted to optimally meet specific requirements by means of parameterization.

### **Indicators and Operating Controls**

The PGV... reader is equipped with seven indicator LEDs for carrying out visual function checks and rapid diagnostics. The reader is equipped with two buttons at the back for activating the alignment aid and parameterization mode.

#### LEDs

LED	Color	Label	Meaning
1	Yellow	BUS STATE	PROFIBUS communication active
2	Red	BUS ERR	PROFIBUS communication error
3	Green/red	PWR ERR/NO CODE	Code detected/not detected, error
4	Yellow	LANE AVAILABLE	Lane available
5	Yellow	FOLLOW LEFT	"Follow left-hand lane" activated
6	Yellow	FOLLOW RIGHT	"Follow right-hand lane" activated
7	Red/green/yello w	INTERNAL DIAGNOSTIC	Internal diagnostics

### **External Parameterization**

In order to parameterize the device externally, the parameterization code is required in the form of a Data Matrix containing the desired reader parameters. Data Matrix code cards detailing the step-by-step process for externally parameterizing the device are printed in the operating instructions for the reader.

The reader can be parameterized only within ten minutes of being switched on. If a key is pressed after ten minutes of the device being switched on, a visual signal is given by the LEDs (LED1, yellow/LED2, red/LED3, green/LED4, yellow/LED5, yellow/LED6, yellow, flashing for two seconds).

- The switchover from normal mode to parameterization mode is made by pressing button 2 on the back of the reader. To switch the device over, button 2 must be pressed and held for more than two seconds. LED4 then flashes.
   Note: Parameterization mode is exited automatically if the device is inactive for one minute. In this case, the reader reverts to normal mode and operates without the settings having been changed.
- Place the parameterization code in the field of vision of the camera module. After the parameterization code is detected, the green LED3 lights up for one second. In the event of an invalid parameterization code, LED3 lights up red for two seconds.
- Briefly pressing button 2 will end parameterization mode.