


Aktive Fläche ausrichten / Align sensing face / Orienter la surface active

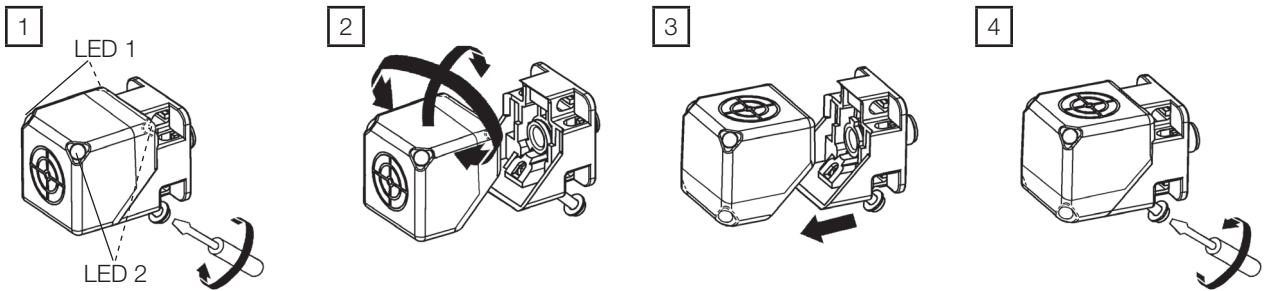


LED 1: grün / green / verte
 LED 2: gelb / yellow / jaune


LEDs im Bereich der aktiven Fläche LEDs near the active surface LED dans la zone de la face sensible	LEDs versetzt zur aktiven Fläche LEDs offset with respect to the active surface LED décalées par rapport à la face sensible
BES Q40KFU-PSC20B-S04G-012	BES Q40KFU-PSC20A-S04G-012
BES Q40KFU-PSC40F-S04G-012	BES Q40KFU-PSC35E-S04G-012
	BES Q40KFU-PAC40E-S04G-012

Montage / Installation / Montage

bündig / flush / encastrable

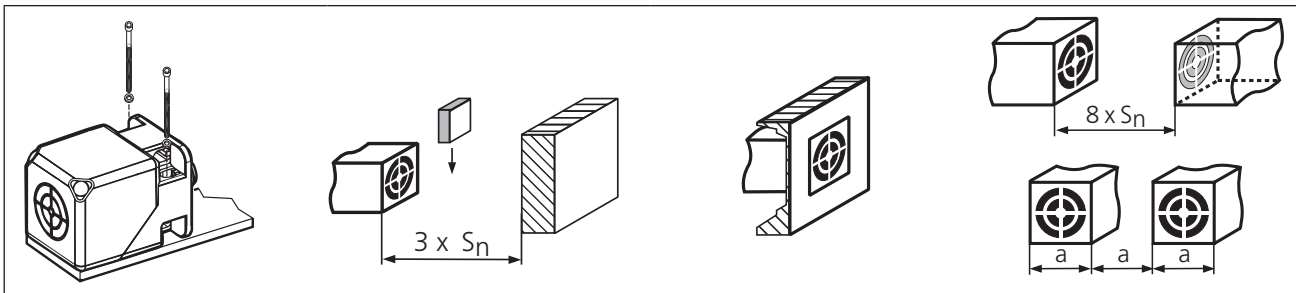

nicht bündig / non flush / non encastrable

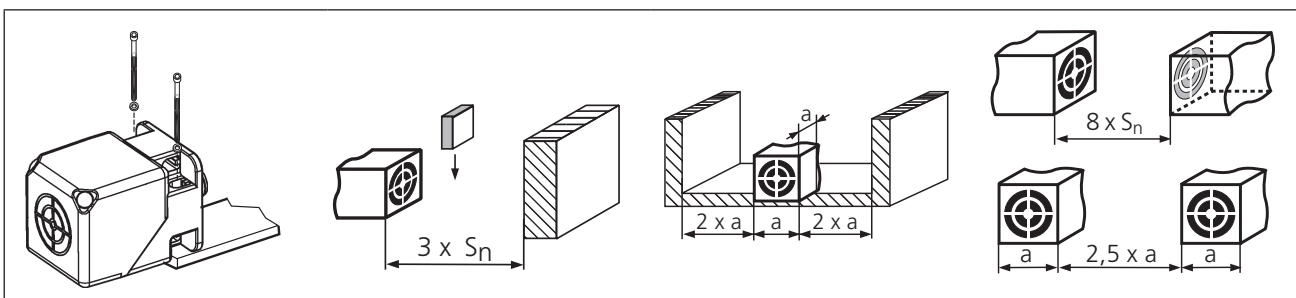

Änderungen vorbehalten / Subject to modification / Sous réserve de modifications

Balluff GmbH
 Schurwaldstrasse 9
 73765 Neuhausen a.d.F.
 Germany
 Phone +49 7158 173-0
 Fax +49 7158 5010
 Service-Center +49 7158 173-370
 service@balluff.de

