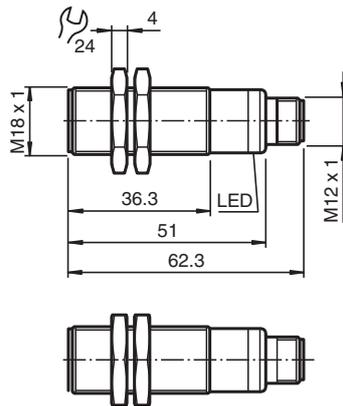# Ultrasonic sensor

UB300-18GM60-E5-V1-M

- Short version: 55 mm
- Function indicators visible from all directions
- Switching output
- 5 different output functions can be set
- Program input
- Temperature compensation
- E1-Type approval

Single head system

Dimensions

Technical Data

General specifications

Sensing range	35 ... 300 mm
Adjustment range	50 ... 300 mm
Dead band	0 ... 35 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 390 kHz
Response delay	approx. 50 ms

Indicators/operating means

LED green	Power on
LED yellow	indication of the switching state flashing: program function object detected
LED red	solid red: Error red, flashing: program function, object not detected

Electrical specifications

Operating voltage	U_B	10 ... 30 V DC , ripple 10 %$_{SS}$
No-load supply current	I_0	≤ 20 mA

Input

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group · www.pepperl-fuchs.com · USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com · Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com · Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com · PEPPERL+FUCHS · 1
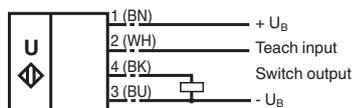
Technical Data

Input type			1 program input operating distance 1: -U_B ... +1 V, operating distance 2: +6 V ... +U_B input impedance: > 4,7 kΩ program pulse: ≥ 1 s
Output			
Output type			1 switching output E5, PNP NO/NC, programmable
Rated operating current		I_e	200 mA , short-circuit/overload protected
Default setting			Switch point A1: 50 mm Switch point A2: 300 mm
Voltage drop		U_d	≤ 3 V
Repeat accuracy			≤ 1 %
Switching frequency		f	≤ 13 Hz
Range hysteresis		H	1 % of the set operating distance
Temperature influence			± 1.5 % of full-scale value
Compliance with standards and directives			
Standard conformity			
Standards			EN IEC 60947-5-2:2020 IEC 60947-5-2:2019
Approvals and certificates			
UL approval			cULus Listed, General Purpose
CCC approval			CCC approval / marking not required for products rated ≤36 V
UN/ECE Regulation No. 10 (E1)			Type-approval number: 10R-058090
Ambient conditions			
Ambient temperature			-25 ... 70 °C (-13 ... 158 °F)
Storage temperature			-40 ... 85 °C (-40 ... 185 °F)
Mechanical specifications			
Connection type			Connector plug M12 x 1 , 4-pin
Housing diameter			18 mm
Degree of protection			IP67
Material			
Housing			brass, nickel-plated
Transducer			epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Mass			31 g

Connection

Standard symbol/Connections:
(version E5, pnp)

1 (BN) — + U_B
2 (WH) — Teach input
4 (BK) — Switch output
3 (BU) — - U_B

Core colours in accordance with EN 60947-5-2.

Connection Assignment

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group   USA: +1 330 486 0001   Germany: +49 621 776 1111   Singapore: +65 6779 9091
www.pepperl-fuchs.com   fa-info@us.pepperl-fuchs.com   fa-info@de.pepperl-fuchs.com   fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS   2
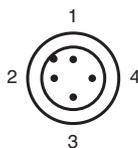
Connection Assignment

Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

Characteristic Curve

Characteristic response curve

Curve 1: flat surface 100 mm x 100 mm
Curve 2: flat surface 10 mm x 10 mm
Curve 3: round bar, Ø 25 mm
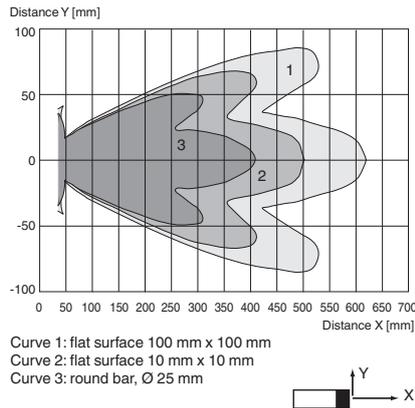
Programmable output modes

1. Window mode, normally open mode
A1 < A2:

2. Window mode, normally closed mode
A2 < A1:

3. One switch point, normally open mode
A1 -> ∞:

4. One switch point, normally closed mode
A2 -> ∞:

5. A1 -> ∞, A2 -> ∞: Object presence detection mode
   Object detected: Switch output closed
   No object detected: Switch output open
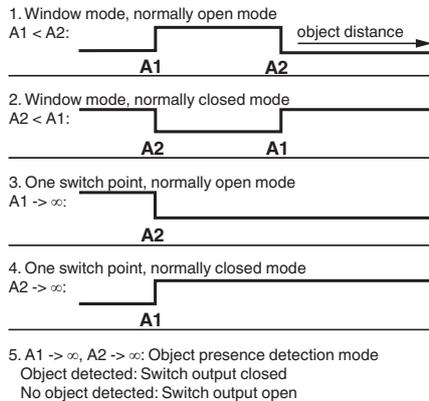
Accessories

	UB-PROG2	Programming unit
	OMH-04	Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm
	BF 18	Mounting flange, 18 mm
	BF 18-F	Plastic mounting adapter, 18 mm
	BF 5-30	Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Accessories

	V1-G-2M-PVC	Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey
	V1-W-2M-PUR	Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

Teach-In

Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set
1. Window mode, normally-open function
2. Window mode, normally-closed function
3. one switching point, normally-open function
4. one switching point, normally-closed function
5. Detection of object presence

TEACH-IN window mode, normally-open function
- Set target to near switching point
- TEACH-IN switching point A1 with $-U_B$
- Set target to far switching point
- TEACH-IN switching point A2 with $+U_B$

TEACH-IN window mode, normally-closed function
- Set target to near switching point
- TEACH-IN switching point A2 with $+U_B$
- Set target to far switching point
- TEACH-IN switching point A1 with $-U_B$

TEACH-IN switching point, normally-open function
- Set target to near switching point
- TEACH-IN switching point A2 with $+U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with $-U_B$

TEACH-IN switching point, normally-closed function
- Set target to near switching point
- TEACH-IN switching point A1 with $-U_B$
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with $+U_B$

TEACH-IN detection of objects presence
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with $-U_B$
- TEACH-IN switching point A2 with $+U_B$

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Installation Conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.
In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 1111	Singapore: +65 6779 9091
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

5