


Precision positioning on hole in the 70 mm x 70 mm housing





Function

The sensor has been developed for the precision positioning of high-bay racking operating equipment. It detects circular holes in the racking structure and their positional deviation from the nominal position. The sensor operates in two dimensions.

Dimensions

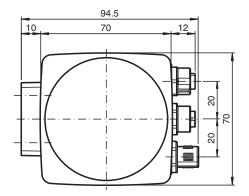

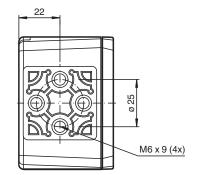

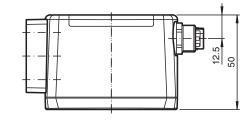

Technical Data

General specifications

·		
Light type	Integrated LED lightning (infrared)	
Object size	Hole diameter 13 mm	
Response delay	100 ms	
Read distance	400 mm	
Depth of focus	± 50 mm	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com




Capture rangemax. 120 mm x 100 mmNominal ratingsCameraCameraTypeCMOS , Global shutterNumber of pixelsGGray scale752 x 480 pixelsGray scale256Functional safety related parametersMTTFd95 aMission Time (TM)95 aDiagnostic Coverage (DC)0 %Operation indicatorLED green: Ready for operationFunction indicatorLED green: Ready for operationFunction indicator7 LEDs (communication, alignment aid, status information)	
Nominal ratings Camera Image: component of the second sec	
CameraCTypeCMOS, Global shutterNumber of pixels752 x 480 pixelsGray scale256Functional safety related parametersMTTFd95 aMTTFd95 aMission Time (TM)10 aDiagnostic Coverage (DC)0%Indicators/operating meansLED green: Ready for operation	
TypeCMOS , Global shutterNumber of pixels752 x 480 pixelsGray scale256MTTFdMTTFd95 aMission Time (TM)10 aDiagnostic Coverage (DC)0%Indicators/operating meansOperation indicatorLED green: Ready for operation	
Number of pixels 752 x 480 pixels Gray scale 256 Functional safety related parameters 95 a MTTF _d 95 a Mission Time (T _M) 10 a Diagnostic Coverage (DC) 0% Indicators/operating means LED green: Ready for operation	
Gray scale 256 Functional safety related parameters 95 a MTTFd 95 a Mission Time (T_M) 10 a Diagnostic Coverage (DC) 0% Indicators/operating means LED green: Ready for operation	
Functional safety related parameters MTTF _d 95 a Mission Time (T _M) 10 a Diagnostic Coverage (DC) 0% Indicators/operating means LED green: Ready for operation	
MTTF _d 95 a Mission Time (T _M) 10 a Diagnostic Coverage (DC) 0% Indicators/operating means ED green: Ready for operation	
Mission Time (T _M) 10 a Diagnostic Coverage (DC) 0 % Indicators/operating means ED green: Ready for operation	
Diagnostic Coverage (DC) 0 % Indicators/operating means Operation indicator LED green: Ready for operation	
Indicators/operating means Operation indicator LED green: Ready for operation	
Operation indicator LED green: Ready for operation	
Control elements Button for parameterization	
Electrical specifications	
Operating voltage U _B 24 V DC +/- 15 %, PELV	
No-load supply current I_0 max. 400 mA	
Power consumption P ₀ 6 W	
Interface	
Interface type 100 BASE-TX PROFINET	
Protocol PROFINET IO Real-Time (RT) Conformance class A	
Transfer rate 100 MBit/s	
Conformity	
Shock resistance EN 60068-2-27:2009	
Vibration resistance EN 60068-2-6:2008	
Emitted interference EN 61000-6-4:2007+A1:2011	
Noise immunity EN 61000-6-2:2005	
Photobiological safety exempt group according EN 62471:2008	
Approvals and certificates	
CE conformity CE	
UL approval cULus Listed, General Purpose, Class 2 Power Source	
CCC approval CCC approval / marking not required for products rated ≤36 V	
Ambient conditions	
Operating temperature 0 60 °C (32 140 °F) , -20 60 °C (-4 140 °F) (noncondensing; prev on the lens!)	ent icing
Storage temperature -30 85 °C (-22 185 °F)	
Relative humidity 90 % , noncondensing	
Mechanical specifications	
Housing width 70 mm	
Housing height 70 mm	
Housing depth 50 mm	
Degree of protection IP67	
Material	
Housing PC/ABS	
Optical face Plastic pane	
Installation 4 x M6 threading	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

2

Vision Sensor

Connection

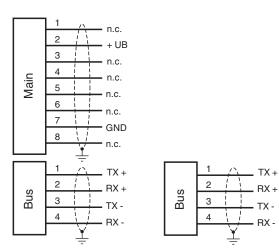



Connection Assignment





Indication

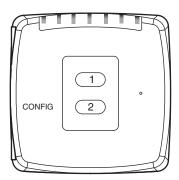

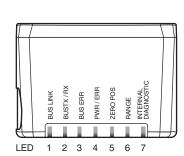


Release date: 2022-08-09 Date of issue: 2022-08-09 Filename: 270875_eng.pdf

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com

3

Characteristic Curve

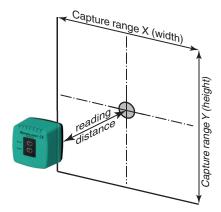

Accessories

	V19-G-5M-PUR-ABG	Female cordset single-ended M12 straight A-coded, 8-pin, PUR cable grey, shielded
⊕ ∰	PCV-MB1	Mounting bracket for PCV* read head
S.	PCV-SC12A	Grounding clip for PCV system
and a	PCV-SC12	Grounding clip for PCV system
	V19-G-2M-PUR-ABG	Female cordset single-ended M12 straight A-coded, 8-pin, PUR cable grey, shielded

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

4

Additional Information

General

The PHA... Vision Sensor has been developed for the rack fine positioning of stock feeders. This device detects circular holes in the rack structure and determines the position deviation of these holes in relation to the target position. The Vision Sensor operates in two dimensions.

Mounting and Commissioning

Mount the PHA... Vision Sensor in such a way that the optical surface of the device captures the optimum distance to the carrier/hole (see "Technical Data"). The stability of the Vision Sensor mounting and the manner in which the vehicle is guided must ensure that the device is not operated outside of its depth of focus range.

All Vision Sensors can be adapted to optimally meet specific requirements by means of parameterization.

Indicators and Controls

The PHA... Vision Sensor is equipped with seven indicator LEDs for carrying out visual function checks and rapid diagnostics. The read head is equipped with two buttons at the back for activating the parameterization mode.

LEDs

LED	Color	Labeling	Meaning
1	yellow	BUS LINK	PROFINET communication active
2	yellow	BUS TX / RX	Data transfer
3	red	BUS ERR	PROFINET communication error
4	green/red	PWR/ERR	Fault with power supply/general error
5	yellow	ZERO POS	Zero position reached
6	yellow	RANGE	Within detection/capture range
7	red/green/yellow	INTERNAL DIAGNOSTIC	Internal diagnostics

External Parameterization

In order to parameterize the device externally, the parameterization code is required in the form of a data matrix containing the desired parameters. Data matrix code cards detailing the step-by-step process for externally parameterizing the device are printed in the operating instructions for the Vision Sensor.

- The Vision Sensor is switched over from normal operation to parameterization mode using button 2 on the back of the device. To switch the device over, button 2 must be pressed and held for more than two seconds. LED5 then flashes.
 Note: Parameterization mode is exited automatically if the device is inactive for one minute. In this case, the Vision Sensor reverts to normal mode and operates without the settings having been changed.
- Place the parameterization code in the field of vision of the camera module. After the parameterization code is detected, the green LED4 lights up for one second. In the event of an invalid parameterization code, LED4 lights up red for two seconds.
- Briefly pressing button 2 will end parameterization mode. Unsaved changes will be lost.

